



**NOTES:**

1. Unless noted, all capacitors in uF, resistors in ohms.
2. This drawing produced with ExpressSCH.
3. Dip Switch DS1 settings (default settings in bold):

DIP DS1 SETTINGS

PIN/PORT	BW	186 Hz	139 Hz	93 Hz	70 Hz
19 A0	DIP-1	<b>OFF</b>	ON	OFF	ON
20 A1	DIP-2	OFF	OFF	ON	ON

PIN/PORT	FREQ	496 Hz	558 Hz	<b>744 Hz</b>	992 Hz
21 A2	DIP-3	OFF	ON	OFF	ON
22 A3	DIP-4	OFF	OFF	ON	ON

**KG4JJH**

**CW Decoder Schematic**

Allen Baker

Rev 0  
12/18/2018

Page 1 of 1