



NOTES:

1. Unless noted, all capacitors in uF, resistors in ohms.
2. This drawing produced with ExpressSCH.
3. Dip Switch DS1 settings (default settings in bold):

DIP DS1 SETTINGS

PIN/PORT	BW	186 Hz	139 Hz	93 Hz	70 Hz
19 A0 DIP-1	OFF	ON	OFF	ON	ON
20 A1 DIP-2	OFF	OFF	ON	ON	ON

PIN/PORT	FREQ	496 Hz	558 Hz	744 Hz	992 Hz
21 A2 DIP-3	OFF	ON	OFF	ON	ON
22 A3 DIP-4	OFF	OFF	ON	ON	ON

KG4JJH		
CW Decoder Schematic		
Allen Baker	Rev 0, 7/29/21 12/18/2018	Page 1 of 1